


How to use the Therma-Whelp clamp

1. Assemble clamp to fixture.

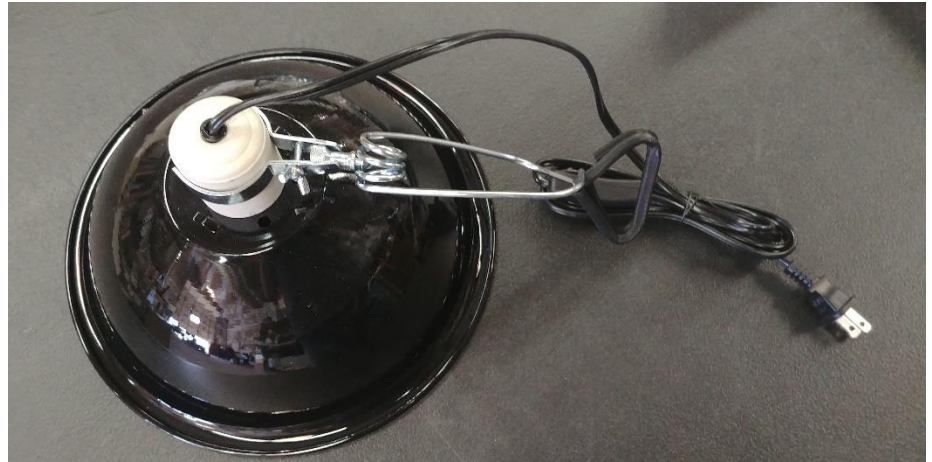

2. Make sure wing-nut is tight.



This joint allows for angle adjustment.



3. The clamp now allows you to adjust the angle of your fixture for optimum heat dispersion.

Place hook through center of clamp and hook onto the coil, then clamp onto stand from the bottom.